




DEXTER
LAUNDRY

STACK DRYER TROUBLESHOOTING COIN SWITCH / HARNESS

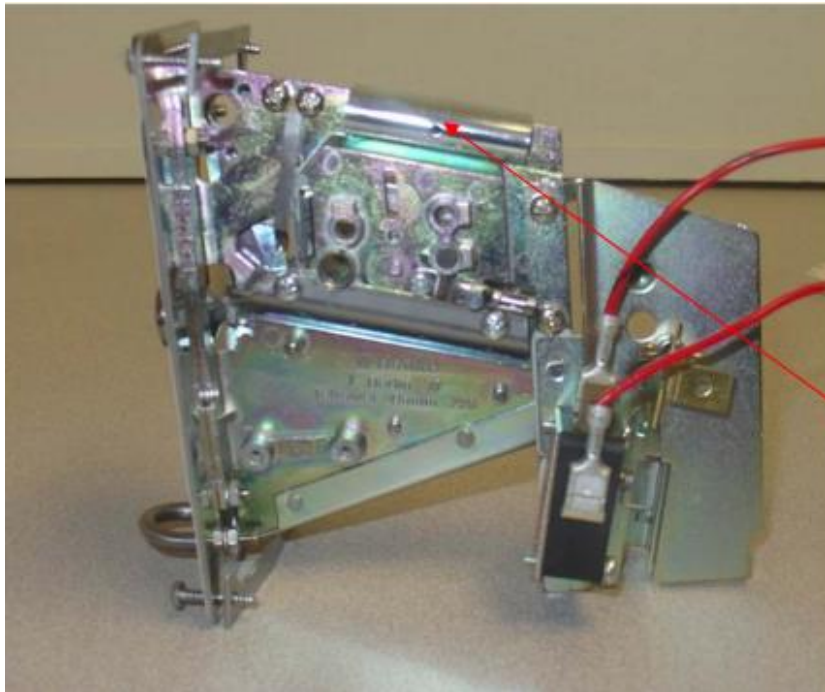

Coin Switch/Harness.

- Remove coin acceptor from machine.
- Check coin switch for proper operation when coin is dropped.
- If switch fails to activate replace coin switch.
- Check harness for proper connections and damaged wires.
- Slide top clip off the acceptor to access the interior of the coin drop.
- Clean all buildup and debris from coin slide with a wet cloth. Replace the clip in reverse order.

