



DEXTER
LAUNDRY

CHANGE / CLEAN COIN ACCEPTOR

Step 1 – Shut off power supply to machine.

Step 2 – Remove top panel.

Step 3 – Remove coin acceptor.

- Loosen (4) Torx screws enough remove coin acceptor and retainers from control panel.
- Do not remove the screws. Remove acceptor.

Step 4 – Cleaning the acceptor.

- Remove the slide from the top of the acceptor. This gives access to coin chute.
- Using water and a wash cloth clean all lint and debris from chute assembly. Make sure the acceptor is free of dirt and debris.
- Clean optical eye with Q-tip (optical acceptors only).
- Check the micro switch for activation when coin is dropped. Replace micro switch if no activation

Step 5 – Reinstall coin acceptor.

