




DEXTER
LAUNDRY

STACK DRYER REPLACEMENT OF MEMBRANE SWITCH

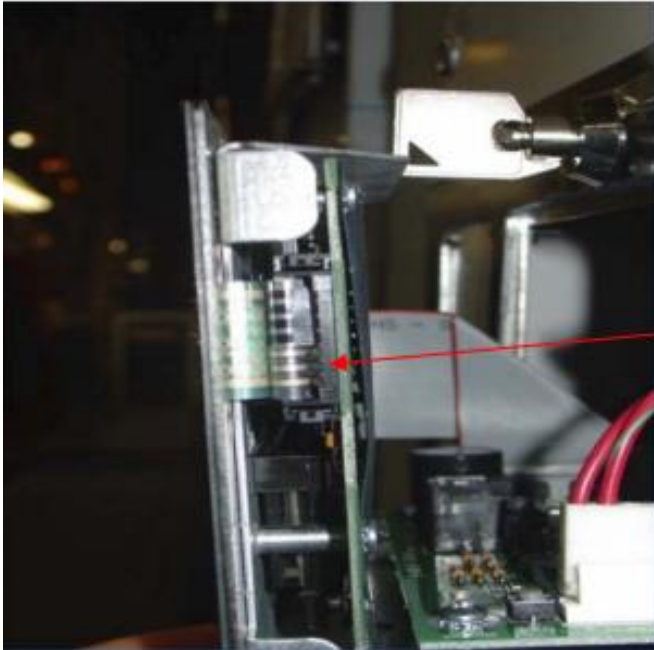

Replace Membrane Switch

- Disconnect the communication ribbon from the display board.
- Remove membrane switch (9801-059-005) from the control front.
- Use a soft cotton cloth with denatured alcohol to clean then front of the control assembly.
- Replace membrane switch in reverse order.

