

SYMPTOM - Display counts 3-2-1 then quits after the machine is activated

EMERGENCY STOP BUTTON REPLACEMENT



Symptom of a defective E- Stop button

- Washer accepts coins.
 - When the washer starts the enunciator will sound, “Beep”, The display will count down 3, 2, 1, and then stop
 - **The display will prompt “00”.**
- Step 1 – Remove the machine power
Step 2 – Remove the top panel.



DEXTER
LAUNDRY

EMERGENCY STOP BUTTON REPLACEMENT

Step 3 - Replace the emergency stop button.

- Loosen the plastic nut and rotate the switch 180 degrees to access the release clip.
- Press the release clip to remove the micro switch from the button assembly.
- Remove the plastic nut from the button assembly and slide the button assembly out through the front of the machine.
- Once the assembly is removed, disconnect the micro switch harness from the main PCB P1 connection.

