



## DDAD Troubleshooting The 24VAC Heat Transformer

### Troubleshooting Transformer.

- Located in rear control box below the ignition control box.
- Check voltage coming in to the transformer on the black wire. Voltage should be 120VAC.
- Check voltage coming out of the transformer on the red wire that goes to the ignition control box.
- Voltage coming out of the transformer should be 24VAC.
- If voltage is present going in to the transformer and nothing coming out on the red wire, the transformer will need to be replaced.

