



DDAD Hi-Limit Safety Thermostat

Hi-limit Safety Thermostat.

- Check the continuity of the Hi-limit thermostat.
- If continuity is not present then replace the Hi-limit thermostat.
- If continuity is present the Hi-limit thermostat is good.
- Check connections of orange and brown wires to ensure proper connections.
- Check for voltage on the Orange wire during heat cycle to ensure Hi-limit thermostat is receiving voltage.

