



# WCAD Washer Emergency Stop Button

## Step 1 – Signs of a damaged E- Stop button.

- Machine accepts coins, When machines starts the buzzer will sound a long beep, Count down "3, 2, 1" and then stop.
- The display will then show "0".

## Step 2 – Shut off power supply.

## Step 3 – Remove top panel.

## Step 4 – Replace emergency stop button.

- Remove the (2) 11/32 nuts from the control panel.
- Remove the Emergency Stop assembly by sliding mounting plate off of the studs. Disconnect harness from control PCB.
- Once the assembly is removed disconnect micro switch harness.
- To disconnect micro switch harness press tab inward and slide switch harness off of push button
- Replace in reverse order.

