



DEXTER
LAUNDRY

Variable Frequency Drive

Step 1 – Signs of VFD failure.

- Cylinder not turning
- Final extract issues.
- F13, F15, F17, F19 on PCB display.

Step 2 – Check VFD for error codes

- Remove VFD cover on rear channel of machine.
- During the event of an F code on the washer display, check the VFD display for an error code. Ex. CE10

Step 3 – Reset VFD.

- To reset VFD units power down machine for 3 min. then return power to machine.
- This should clear the fault codes off the VFD as well as the PCB display.
- If fault doesn't clear then there is an internal issue with the VFD.

