

Replacing A Broken V Belt

Step 1 – Shut power off to machine

Step 2 – Remove rear panel

- Remove (10) 5/16 screws from the rear panel.
- Once screws are removed the panel can now be removed from machine.

Step 3 – Replace V belt

- Remove old or broken V belt from machine.
- Install new V belt by placing on motor pulley, Keeping tension on the motor spring and rolling it on to the driven pulley.
- Replace rear panel.



