




***DEXTER***<sup>®</sup>  
***LAUNDRY***



**DDBD T-50X2 Models**  
**50 Pound Stacked Commercial Dryer**  
**Programming Instructions**



# Dexter Control Features Activation Procedures



Remove jumper to activate Anti-Wrinkle feature

Battery

Remove jumper to activate Last Temperature Used feature



Program Button

---

# Changing Programmed Data

## Entering Program Mode

The controller is put into the programm.ing mode by opening both dryer doors and pushing the program switch (shown in a previous picture) on the back of the controller circuit board. The switch is accessed by unlocking the controller and sliding it out just enough to reach the switch.

## Programming

The upper display shows the setting for each step of the program as you go through the list.

The lower display gives the number of the program step as given on the previous program step chart (00-18).

The lower "Hot switch" will advance the controller through the nineteen steps which can be observed or altered. Each step can be identified by the step number in the lower display.

The upper and lower "Start switches" increase and decrease the values in the upper display by the increments given in the program step chart.

The lower "Perm press" switch will return the value for the step being displayed to the original value given on the program step chart. Note: For the hour meter and the money audit steps this value is zero.

## Exiting Program Mode

The controller remains in the programm.ing mode until one of the following happens:

1. The mode switch is pushed again.
2. The eighteenth and last step of the programm.ing sequence is completed (first step is 00, last step is 18) and the step switch is pushed following this step.
3. Programm.ing is stopped for approximately one minute.
4. The dryer doors are closed.

## Programming Example

For an example we will change the vend price from \$.25 to \$.50.

### Step

1. Open upper and lower loading doors.
2. Unlock the control tray and carefully slide it about 3 inches out of the machine. Press the program switch behind the vertical portion of the circuit board. Replace and relock the control tray in its original position.
3. Consult program chart to find vend price as step 09. Push lower "Hot" button to advance through steps until 09 is displayed in lower display. Current vend price (25 in this case) will be displayed in upper window.
4. Push upper start button to increase price by increments of 1 until 50 is reached and shows in the upper display.

**NOTE:** To make any change it is necessary after changing the value to press the lower "Hot" and advance one more step in order for the new value to be entered into the computer memory.

5. Exit the program mode by any of the methods previously mentioned.
6. The displays should now show "50" as the price to start the machine.

---

## PROGRAMMED DATA DEFAULT SETTINGS

Adjustable parameters are vend price, temperatures, and cool-down times. Hours run and money count information can be displayed and these registers are resettable to zero.

There are eighteen programming steps. These eighteen steps are: (all temperatures are degrees Fahrenheit).

<b>STEP SETTINGS</b>	<b>DESCRIPTION</b>	<b>RANGE</b>	<b>INCREMENTS</b>	
00	Lower drum hour meter	0 to 9999 hr.	—	0
01	Upper drum hour meter	0 to 9999 hr.	—	0
02	Left coin audit	0 to \$9999	—	0
03	Right coin audit	0 to \$9999	—	0
04	Hot temp. setting	150-190	5	175
05	Medium temp. setting	120-170	5	150
06	Warm temp. setting	110-150	5	125
07	Left coin input	0-100	1 cents .	10
08	Right coin input	0-100	1 cents	25
09	Vend price	0-999	1 cents	25
10	Time left coin	0-99:55 minutes	1 sec.	3.20
11	Time right coin	0-99:55 minutes	5 sec.	8:00
12	Time for free vend	0-99:55 minutes	5 sec.	8:00
13	Cool down time Hot cycle	0-10:00 minutes	5 sec.	2:00
14	Cool down time Medium	0-10:00 minutes	5 sec.	2:00
15	Cool down time Warm cycle	0-10:00 minutes	5 sec.	2:00
16	Temperature Type display	Centigrade or Fahrenheit	C or F	F
17	Decimal Point		On or Off	On
18	Seconds Display		No or Yes	No