

STACK DRYER TROUBLESHOOTING CONTROL BOARD LIGHTS

- Unlock the computer board assembly and slide control tray out of machine.
- Verify the door switch lights come on when door is closed. If light doesn't come on when door is closed there is an issue with the door switch circuit.
- Verify the motor run light comes on when the machine starts.
- Verify the gas light is coming on when the machine is calling for heat. This light indicates the gas relay on the control board is receiving voltage.
- If gas light doesn't come on check the violet wire coming from the motor for voltage. (120VAC) If voltage is present from motor but the gas light doesn't light up replace the control board.

