

# STACK DRYER TROUBLESHOOTING

## GAS VALVE / GAS PRESSURE

### Gas Valve

- Check incoming voltage on the brown wire (24 VDC ) should be present when machine is calling for heat.
- If (24 VDC ) is present and no gas is flowing thru valve then the valve is damaged. Replace damaged valve.
- If voltage is present and gas is flowing thru allowing the burner to light, but the burner has a very low flame. Check the gas pressure to insure an adequate flow of gas is available.

