

# STACK DRYER DOOR SWITCH

## Door Switch.

- Check to ensure that door switch L.E.D. light on control board lights up when door is closed.
- If L.E.D. doesn't light up there is an issue with the door switch circuit.
- Check for continuity in door switch. If no continuity is present when switch is closed replace the switch.
- If door switch has continuity check for continuity in door switch harness. Check for damaged or broken wires in the door switch harness.
- Replace harness if damaged or broken wires are present.

