

STACK DRYER TROUBLESHOOTING THE SPARK ELECTRODE

Spark Electrode

- Located on the back of the burner assembly.
- Check for voltage going to the electrode by listening to the igniter while the machine is trying to light, If voltage is present, (buzzing noise) but no spark replace electrode.
- The flame sensor is also located on this assembly. If the burner ignites but the electrode is still sparking replace the electrode unit.

