


SYMPTOM - Display counts 3-2-1 then quits after the machine is activated

EMERGENCY STOP BUTTON REPLACEMENT

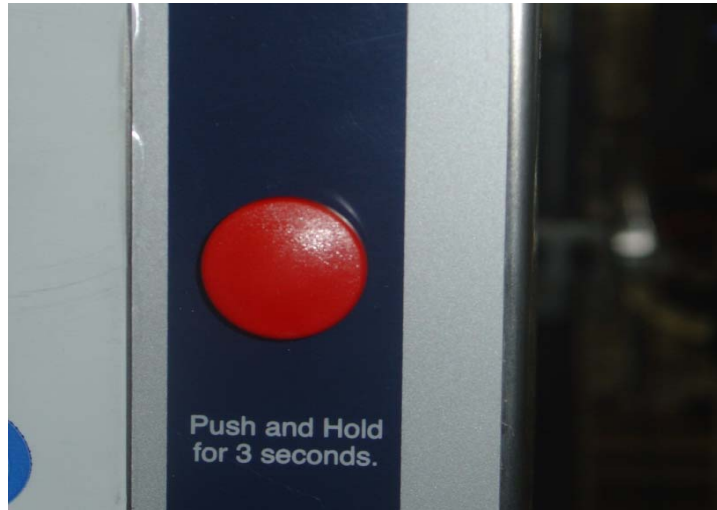

Symptom of a defective E- Stop button

- Washer accepts coins.
- When the washer starts the enunciator will sound, "Beep", The display will count down 3, 2, 1, and then stop.
- The display will prompt "00".

Step 1 – Remove the machine power

Step 2 – Remove the top panel

EMERGENCY STOP BUTTON REPLACEMENT

Step 3 – Replace the emergency stop button.

- Loosen the plastic nut and rotate the switch 180 degrees to access the release clip.
- Press the release clip to remove the micro switch from the button assembly.
- Remove the plastic nut from the button assembly and slide the button assembly out through the front of the machine.
- Once the assembly is removed, disconnect the micro switch harness from the main PCB P1 connection.

