

CHANGING THE DIAPHRAM ON THE WATER VALVE

"F2, SLOW FILL" ERROR, CONSTANT WATER RUNNING

Step 1 – Shut off the power to the machine.


Step 2 – Shut off BOTH of the water supplies.

Step 3 – Remove the water valves

- Disconnect the wiring harness and supply lines from the water valves.
- Remove the (2) 5/16 screws fastening each water valve to the rear channel.

Step 4 – Remove the coils from water valves.

- Remove the (2) screws holding the water valve coils.
- Remove the coils from the solenoid guides to remove the coils from the valve body assembly.
- Remove the (3) screws from the mounting plate, then remove the mounting plate from the valve body.

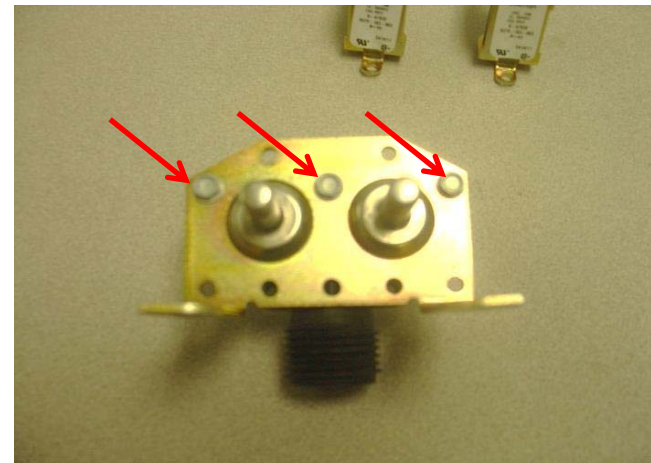

CHANGING THE DIAPHRAM ON THE WATER VALVE

"F2, SLOW FILL" ERROR, CONSTANT WATER RUNNING

Step 5- Remove the solenoid guides

- Remove the solenoid guides, be careful not to lose the actuator or actuator springs from inside the solenoid guide.

Step 6- Remove the diaphragms

- Remove the diaphragms from valve body.
- Clean valve body before installing the new diaphragms.
- Reinstall the diaphragms (**9118-049-001**) in reverse order.
- Reassemble the water valves in reverse order and re-install to the machine.
- Hook up the water supply hose and check for leaks.
- **Step 7** – Re-install the washer top panel.

