

SYMPTOM: Machine Does Not Fill/Display Shows "SLOW FILL/F2"

CHECKING/CLEANING THE DRAIN VALVE

Step 1 – Shut off BOTH water supplies

Step 2 – Remove lower service panel

Step 3 – Remove drain hose

- Loosen the 5/16 hose clamp to remove the drain hose from the drain valve assembly.
- The valve should be in an open position allowing you to see through the valve.
- Inspect the valve for obstructions or build up of foreign material.

Step 4 – Check the drain valve

- Start the washer. This will send the signal to close the valve.
 - Watch the ball valve close when the cycle starts.
 - If valve fails to fully close check for obstructions or a faulty drain valve.
 - Replace drain valve if necessary.
- New 3 inch Black drain valves will have replaceable seals.**

