

STACK DRYER TROUBLESHOOTING LOW VOLTAGE IGNITION HARNESS

Low voltage ignition harness.

- Check low voltage ignition harness for loose wires or connection.
- Check harness for broken or damaged wires.
- Check continuity of the wires in the harness.
- If harness is damaged, replace low voltage ignition harness (9627-860-001) upper harness (9627-860-002) lower harness.

