

# STACK DRYER TROUBLESHOOTING THE IGNITION CONTROL MODULE

## Ignition control module.

- Located in control box on the rear of dryer.
- Check for 24VAC on red wire during ignition cycle.
- If 24VAC is present but no power to gas valve or ignition electrode replace ignition control module.

