

# STACK DRYER TROUBLESHOOTING THE AIRFLOW SWITCH

## **Airflow Switch.**

- Located on the rear of machine.
- Check switch for continuity when closed. If no continuity when closed replace switch.
- Check to make sure switch is closing properly, adjust if needed.

