

STACK DRYER TROUBLESHOOTING THE FUSES

Testing The Fuse

- Check the fuse for the ignition control box. Located on the side of rear control box.
- Check fuse for visible damage (Burned link).
- Check for continuity and proper installation.
- Check the fuse holder assembly for damage.

