



DEXTER
LAUNDRY

SOFT RESET PROCEDURE / FACTORY RESET – “COMM ERROR, F3, F7”

Step 1- Remove the top panel

Step 2 – Remove power from the Washer

Step 3 – Locate the program button on PCB

- The program button is located on the top of the PCB control at the front of the machine

Step 4 – Performing soft reset

- Push and hold the programming button on the PCB and power the machine up while holding the programming button.
- Release the programming button once the control is at:
 - “DEXTER” for all C-Series washers
 - “Set” for all A-series washers

