




DEXTER[®]
LAUNDRY

**USE THE BLUE TABS LOCATED ON THE
RIGHT AND LEFT SIDES OF THE FOLLOWING
DOCUMENT TO ADVANCE TO EACH SECTION.**

Parts Data


Cabinet Group

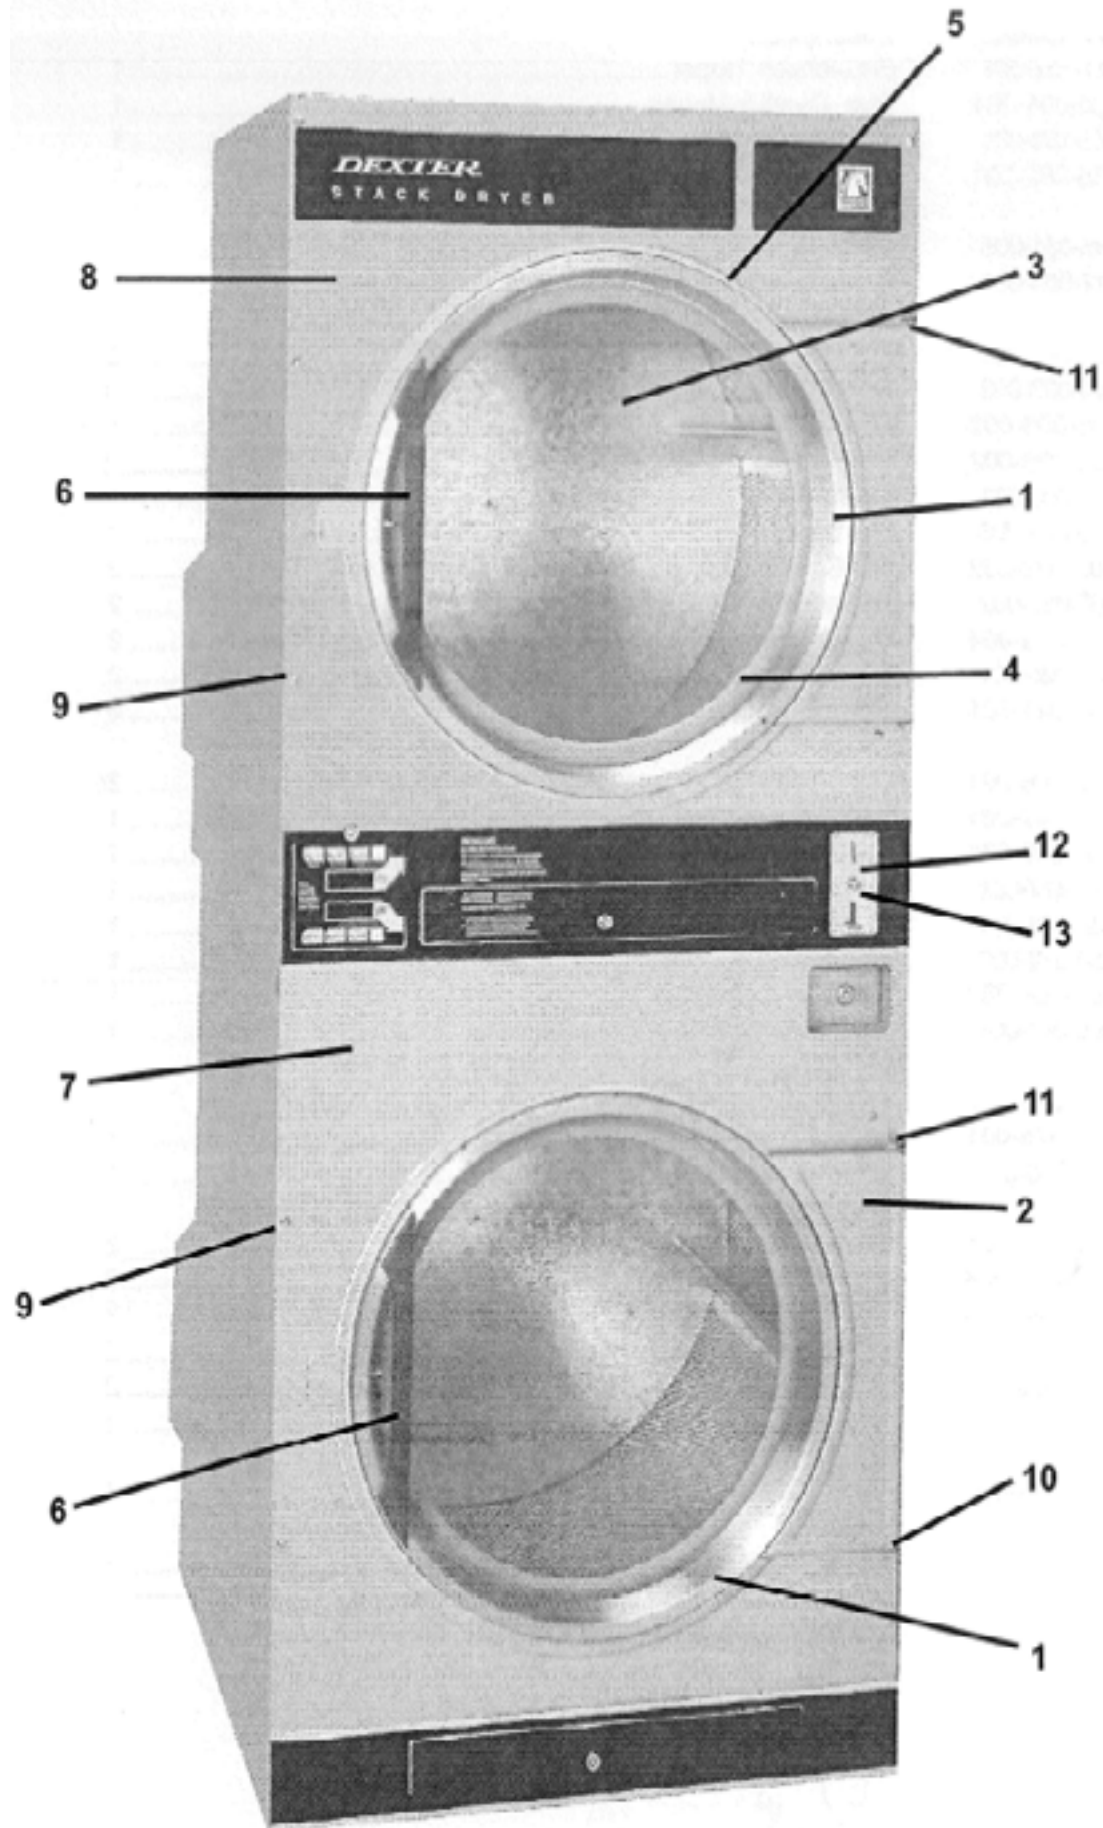

Key	Part Number	Description	Quantity
*	9960-256-027	Door Assy., Loading Complete-Alm.....	2
*	9960-256-026	Door Assy., Loading Complete-Wht	2
*	9960-256-028	Door Assy., Loading Complete-HG.....	2
*	9960-256-030	Door Assy., Loading Complete-SS.....	2
1	9960-255-008	Door Assy., Loading-SS	1
2	9982-280-005	Plate Assy., Hinge (Alm).....	1
2	9982-280-002	Plate Assy., Hinge (Wht).....	1
2	9982-280-004	Plate Assy., Hinge (HG)	1
2	9982-280-011	Plate Assy., Hinge (SS)	1
*	9545-012-015	Screw, Hinge to Door	4
*	8640-413-002	Nut, Hinge to Door.....	4
3	9212-002-003	Glass, Door.....	1
4	9206-164-006	Gasket, Glass.....	1
*	9548-117-000	Support, Door Glass.....	1
5	9206-420-001	Gasket, Outer Rim.	1
6	9244-082-001	Handle, Loading Door.....	1
*	9545-018-017	Screw, Handle	4
*	9531-033-001	Stud, Door Catch.	1
*	8640-413-003	Nut, Acorn	1
*	8640-413-001	Nut, Hex.....	1
*	9086-015-002	Catch, Loading Door.....	1
*	9545-012-003	Screw.....	4
*	8641-582-006	Lockwasher	4
*	8640-399-001	Spring Nut.....	6
7	9989-445-016	Panel Assy., Front- Lower (Almond)	1
7	9989-445-018	Panel Assy., Front- Lower (White).....	1
7	9989-445-022	Panel Assy., Front- Lower (H. Gold).....	1
7	9989-445-024	Panel Assy., Front- Lower (S. Steel)	1
8	9989-445-015	Panel Assy., Front- Upper (Almond)	1
8	9989-445-017	Panel Assy., Front- Upper (White).....	1
8	9989-445-021	Panel Assy., Front- Upper (H. Gold).....	1
8	9989-445-023	Panel Assy., Front- Upper (S. Steel).....	1
9	9545-008-020	Screw, Chrome.....	14
9	8641-582-019	Lockwasher.....	6
*	8640-399-001	Nut, Spring.....	12
10	9544-047-005	Strap, Hinge (Almond).....	2
10	9544-047-002	Strap, Hinge (White)	2
10	9544-047-004	Strap, Hinge (H. Gold)	2
10	9544-047-007	Strap, Hinge (S. Steel).....	2
*	9545-008-020	Screw, Hinge to Panel	8
11	9545-052-001	Screw, Door to Hinge Strap.....	2
*	8641-436-003	Washer, Fiber.....	2
12	9021-001-010	Acceptor, Coin.....	1
*	9486-136-001	Retainer, Coin Acceptor.	1
13	9545-053-002	Screw	4
*	9732-126-001	Switch (for coin acceptor w/ extra acuator).....	1


Cabinet Group Continued

Key	Part Number	Description	Quantity
14	9141-152-001	Escutcheon, Upper	1
15	9435-001-001	Trim, Overlay-Upper.	1
16	9141-153-001	Escutcheon, Lower	1
17	9435-002-001	Trim, Overlay-Lower	1
*	9545-031-005	Screw.....	20
18	9412-084-001	Nameplate, Dex. Stack Dryer.	1
*	9029-042-001	Bracket, Lint Lock	2
19	9866-003-003	Drawer Assembly, Lint-Upper	1
19	9435-003-002	Overlay Trim, Lint Drwr-Upper.....	1
20	9866-003-002	Drawer Assembly, Lint-Lower.	1
20	9435-003-001	Overlay Trim, Lint Drwr-Lower.....	1
*	9532-074-003	Felt Seal (back of lint screen assembly)	2
*	9805-029-002	LINT SCREEN ASS'Y	2
21	8650-012-004	Lock and Key, Lint Drawer	2
*	9306-025-001	Key	
*	9095-041-001	Cam, Lock	2
*	9545-008-001	Lint Screen Strap Hold Down Screw 10-32x1/4	28
22	9857-147-001	Controls Assy, Electronic Mounted with Membrane Switch	1
22	9801-059-004	Membrane Switch Assy.	1
*	9627-677-001	Harness Electronic Control.	1
*	9627-676-002	Harness Door Switch & Coin Switch.....	1
23	8650-012-003	Lock and Key, Control.....	1
*	6292-006-007	Key	
*	9095-041-001	Cam, Lock	1
*	8639-621-007	Screw, Green Grounding.....	1
*	9627-675-001	Harness, Heat Sensor.	1
*	8652-130-037	Terminal, Grounding	1
*	9985-175-001	Bracket Ass'y Heat Sensor.....	2
*	9501-004-003	Sensor Temp Control.....	2
*	9545-045-005	Screw, Round Head.....	2
*	8641-582-014	Lockwasher	2
*	9545-008-024	Screw HX Head Tapping (mounts bracket housing to dryer).....	2
*	9209-037-002	Grommet, 3/16 ID	2
*	8544-005-000	Leg, Leveling	4
*	9074-261-001	Cover, Cabinet.	1
*	9489-042-001	Baffle, Reinforcement	1

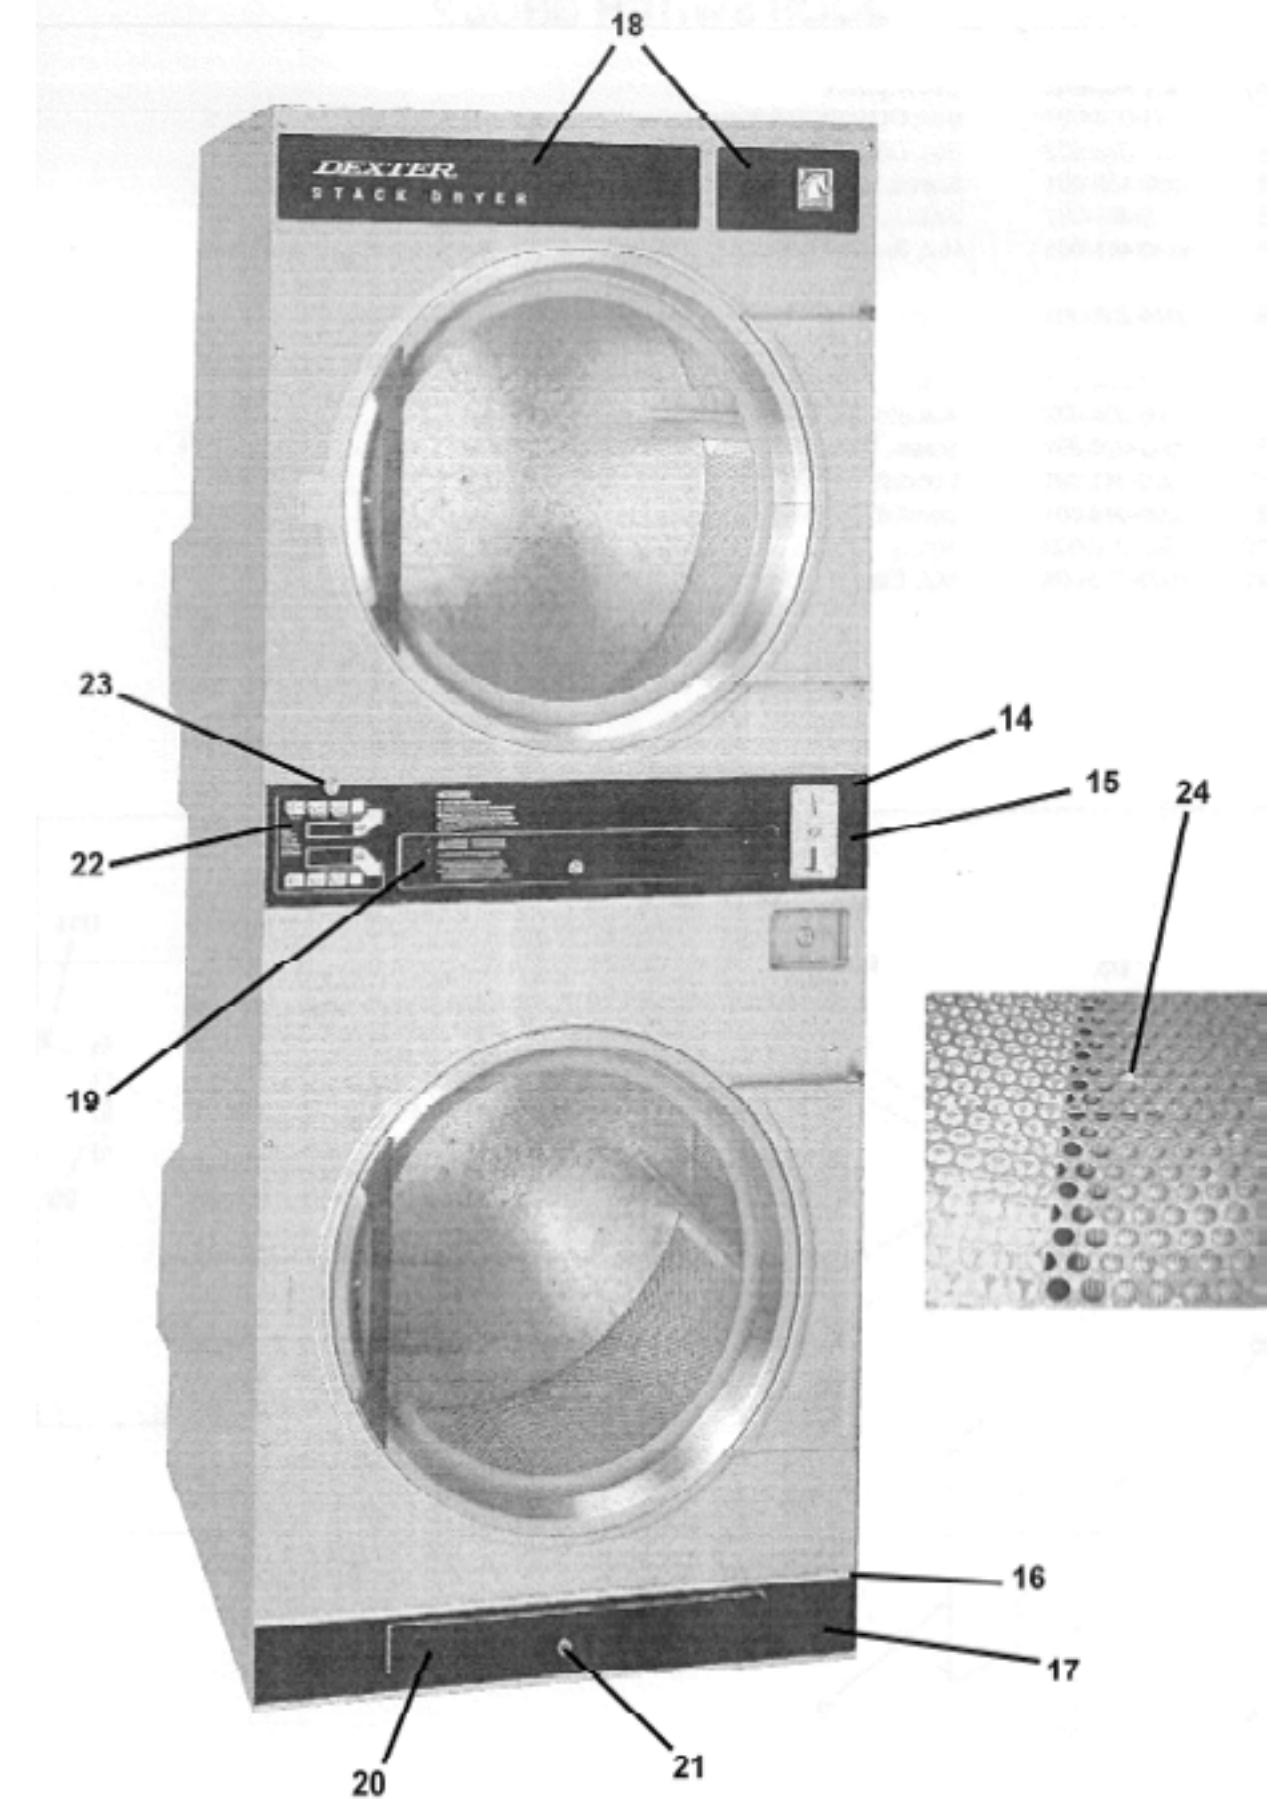


Bearing Housing Group

Key	Part Number	Description	Quantity
J1	9241-161-002	Housing, Bearing.....	2
J2	9036-130-001	Bearing, Ball	4
*	9538-139-002	Spacer, Bearing.....	2
J3	8641-581-009	Washer, Flat	8
J4	8641-582-003	Lockwasher	8
J5	9545-049-001	Screw, 3/8 x 1.....	12
J6	8640-415-002	Nut, 3/8.....	4
J7	8640-400-002	Nut, 5/16.....	8

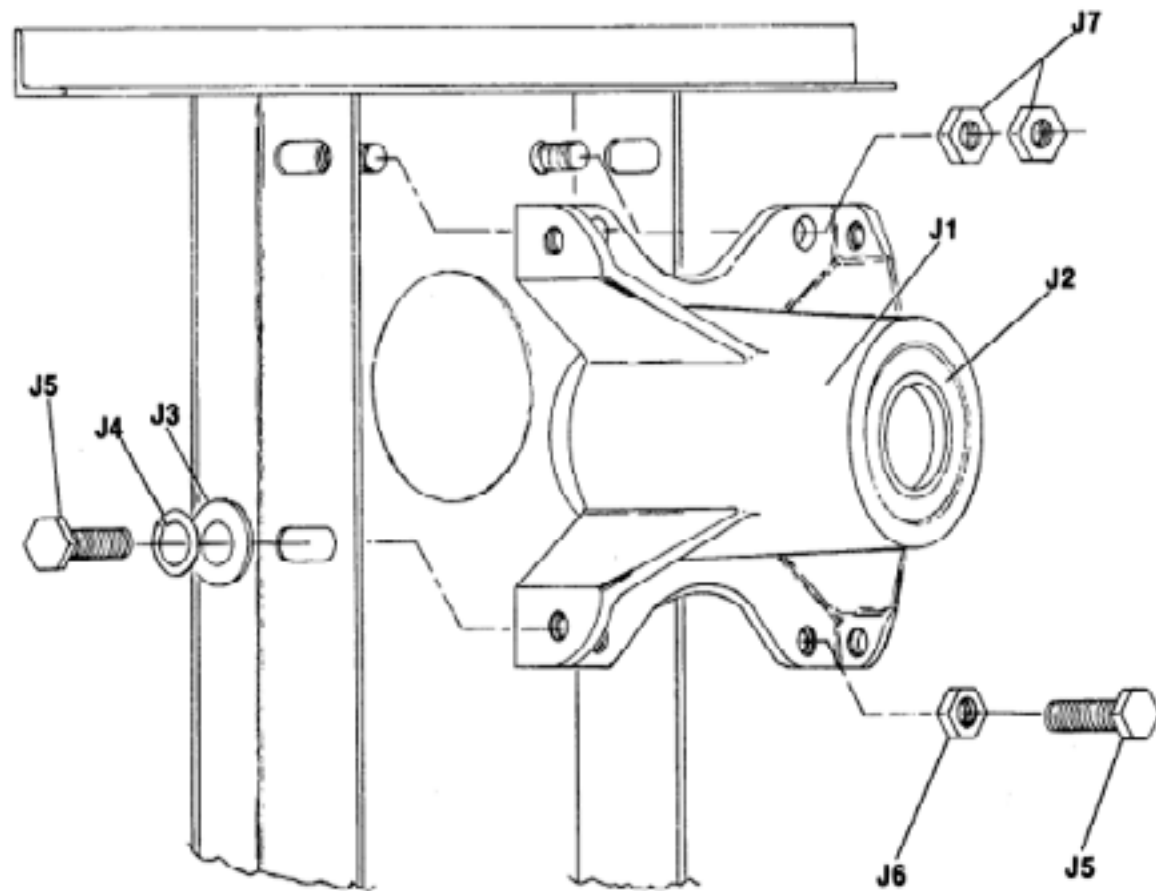


Tumbler Group

Key	Part Number	Description	Quantity
G1	9848-112-001	Tumbler Ass'y.	2
G2	9568-009-005	Spider Ass'y.....	2
G3	9497-019-003	Rod, Tumbler.	6
G4	8641-415-001	Nut	6
G5	8641-582-003	Washer, Spring Lock.....	6
G6	8641-554-001	Washer, Special.....	6
G7	9552-013-000	Shim	AR

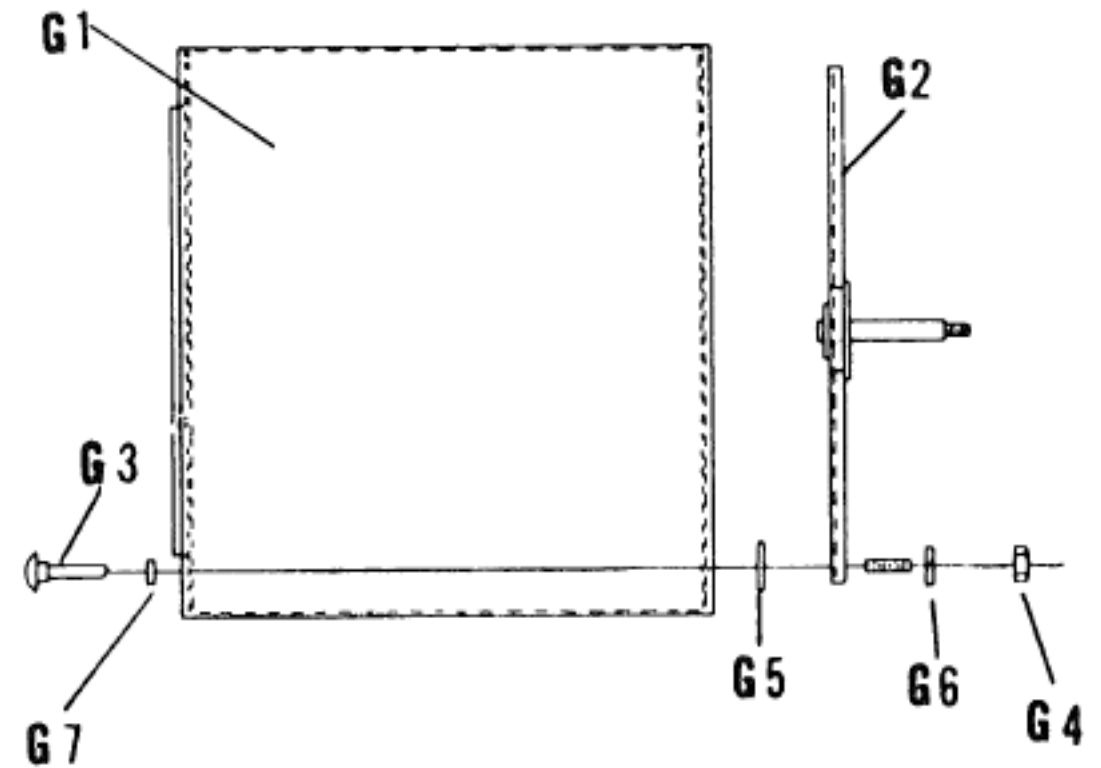

Burner Housing Group


Key	Part Number	Description	Quantity
*	9803-185-001	Housing Assembly, Burner	2
1a	9454-641-001	Left Burner Plate (burner side with cleanout)	2
1	9452-696-001	Service Cover Plate for overtemp reset	2
*	9545-008-006	Screw	8
2	9545-008-001	Screw	12
*	9003-220-001	Angle, Burner Support	2
*	9545-008-006	Screw	4
*	9048-020-001	Burner, Main	4
*	9545-008-006	Screw	4
3	9454-645-001	Panel, Back Burner Housing	2
4	9545-008-001	Screw	8
5	9875-002-002	Electrode Assy, Ignition	2
*	9545-045-001	Screw, Electrode Mtg	4
6	9550-172-001	Shield, Ignitor Terminals	2
7	9379-186-001	Valve, Gas Shut Off	1
8	9857-134-001	Control Assy, Gas	2
9	9381-009-001	Manifold, Assy	2
*	9425-069-009	Orifice, Burner-Natural	4
*	9425-069-008	Orifice, Burner-LP	4
10	9029-047-001	Bracket, Manifold	2
*	9039-915-001	Bracket, Inlet Pipe	2
11	9452-615-001	Plate Assy, Hi-Limit Stat	2
*	9545-008-006	Screw	4
12	9576-203-002	Thermostat, Hi-Limit	2
*	9538-142-001	Spacer, Hi-Limit Stat	4
*	9545-045-007	Screw	4
13	9074-234-001	Cover, Hi-Limit Stat	2
*	9545-008-006	Screw	6
14	9576-207-008	Thermostat, Safety Shutoff	2
*	9545-008-006	Screw	4
15	9825-057-002	Cover, Safety Stat	2
*	9545-008-006	Screw	4
16	9857-116-002	Control, Ignition	2
*	9545-031-006	Screw	4
17	9897-026-001	Terminal Block	2
*	9545-031-004	Screw	4
18	8711-002-001	Transformer, Control	2
*	8640-397-002	Nut, Conduit	2
*	9039-915-001	Bracket	2
*	9545-008-006	Screw	4
19	9631-403-002	Wire, Hi Voltage	2
*	9627-678-001	Harness, Low Voltage Ignition	2
20	9200-001-002	Fuseholder	2
20	8636-018-001	Fuse	2
21	9074-263-001	Cover, Ignition Control, Lower Box	1
*	9545-008-006	Screw	8
*	9550-173-001	Shield, Burner Inlet	1
22	8615-104-038	Pipe Plug In (end of burner manifold)	2
*	9732-102-002	Kit, LP Conversion	2

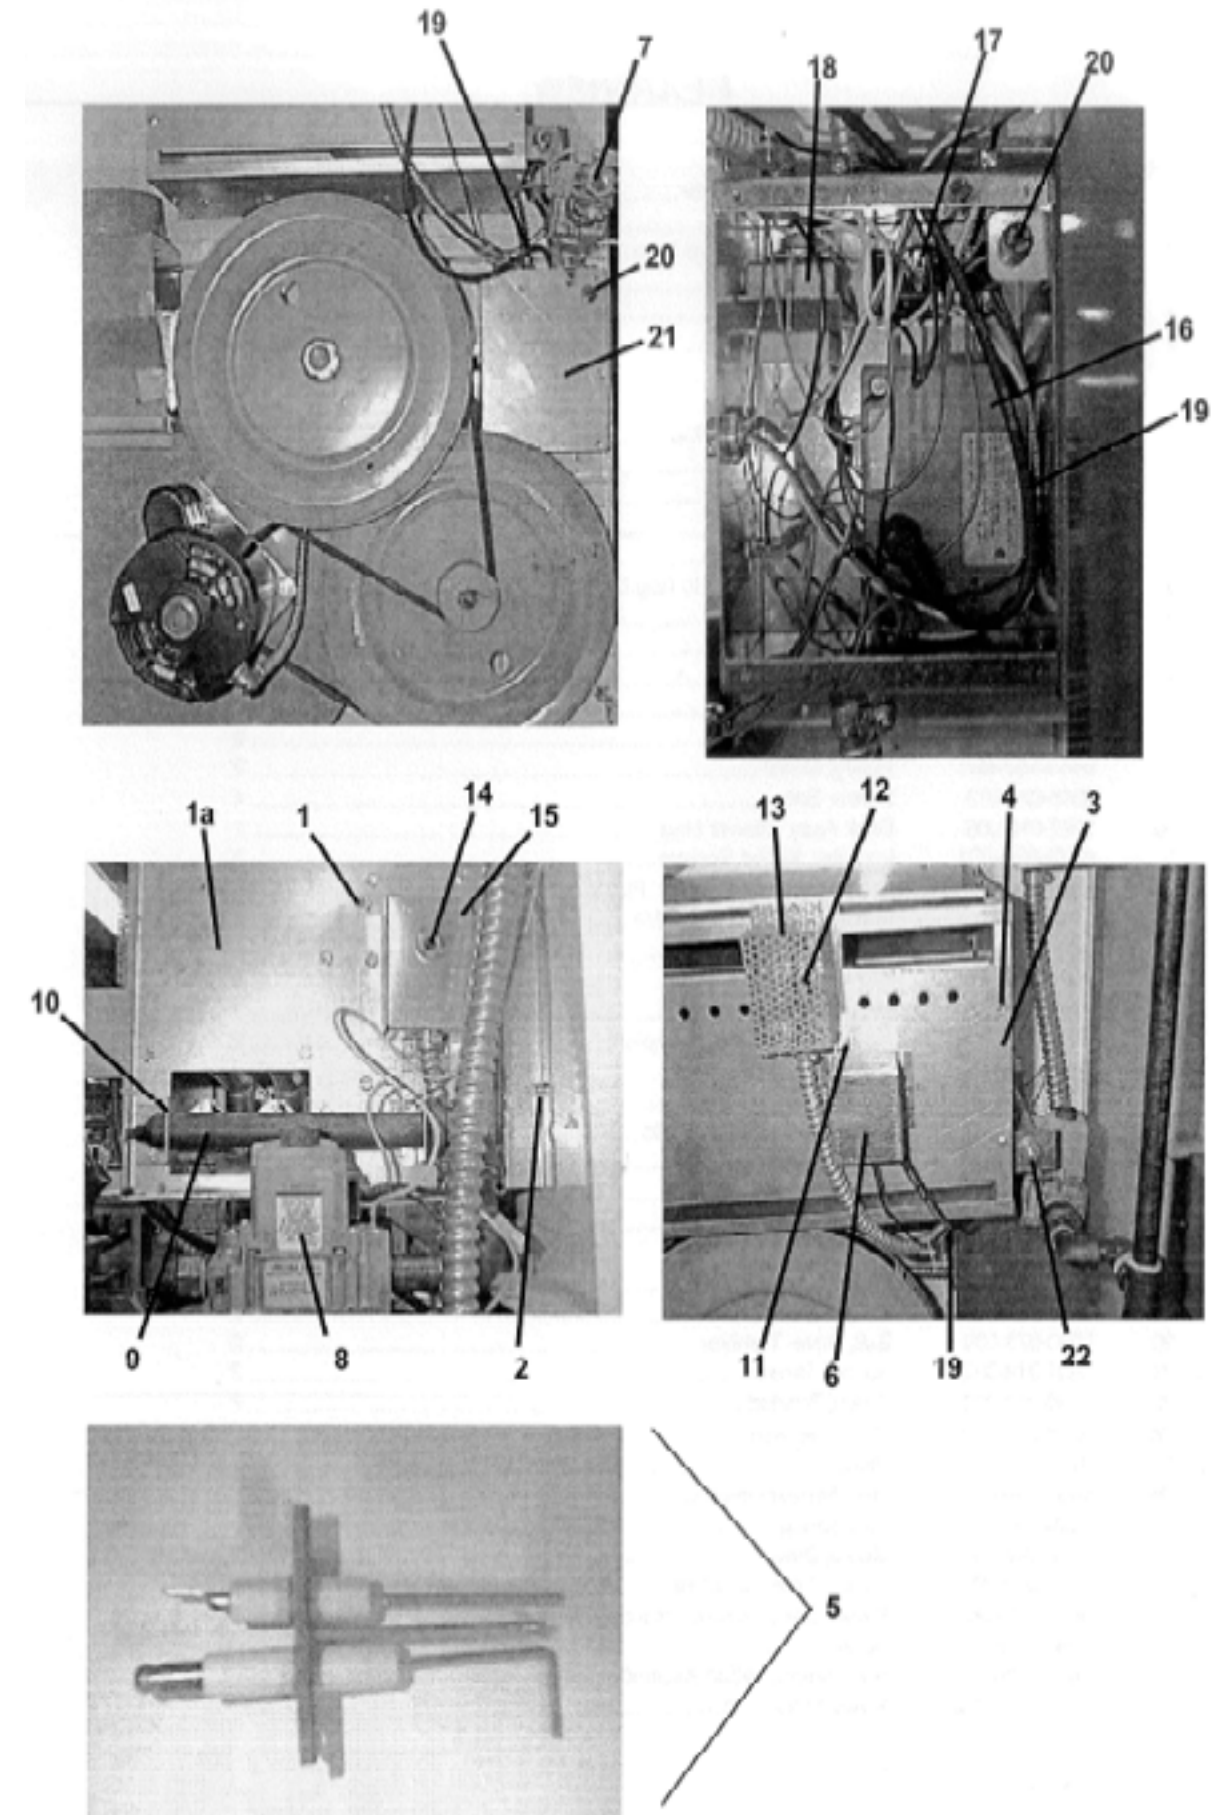

Rear View

Key	Part Number	Description	Quantity
*	9801-060-001	Switch Assembly, Air Flow	2
1	9539-461-009	Switch, Air Flow	2
2	9029-044-001	Bracket, Switch- Air Flow	2
3	9008-007-001	Actuator, Switch.....	2
4	9451-169-002	Pin, Cotter.....	2
5	9545-020-001	Screw	4
*	8640-401-001	Nut, Special Twin	2
*	9550-169-003	Shield, Switch	2
6	9029-046-001	Bracket, Actuator Stop	2
*	9545-008-001	Screw	4
7	9376-296-002	Motor, Drive	2
*	9732-205-003	Motor Replacement Kit.....	
*	5191-106-001	Motor Start Capacitor.....	1
8	9452-619-001	Plate, Motor Mtg.....	8
*	8640-413-002	Nut, Motor to Plate	8
9	9545-018-019	Screw, Motor Plate to Housing Back	8
9	8641-582-007	Lockwasher	8
9	9538-163-006	Spacer	8
9	8641-581-017	Flat Washer.....	24
9	9209-086-002	Rubber Grommet.....	8
*	9538-166-006	Grommet Spacers.....	8
27	9453-157-001	Pulley, Motor.....	2
*	9545-028-013	Screw, Set.....	4
10	9962-010-006	Back Assy, Blower Hsg	2
*	9278-039-001	Impeller, W/Set Screws	2
11	9991-053-001	Support Assy, Intermediate Pulley.....	2
12	9545-029-010	Bolt Rd Hd 3/8-16x1 1/4	6
13	9545-029-003	Bolt 3/8-16x1 1/2	2
12	8640-415-004	Nut	6
12	8641-581-035	Washer, Flat	6
14	9861-022-001	[NEW] Tension Arm Assy.....	2
*	9861-015-001	Arm Assy, Short [OLD]	2
*	9001-049-002	Arm, Tension [OLD].....	2
16	9908-039-004	Pulley Assy, Intermediate	2
17	9908-040-001	Pulley Driven	2
*	9538-164-001	Spacer, Shaft.....	2
*	9306-006-000	Key, Tumbler Shaft.....	2
18	8640-222-000	Nut, Hex	2
18	8641-582-015	Washer, Lock.....	2
19	9040-077-001	Belt, Drive- Motor	2
20	9040-073-009	Belt, Drive- Tumbler	2
21	9534-319-002	Spring, Tension.....	2
22	9099-012-002	Chain, Tension.....	2
23	9248-022-002	Hook, Tension	2
*	9125-003-001	Damper.....	4
24	9451-146-004	Pin, Damper Hinge.....	4
*	8520-141-000	Nut, Spring.....	8
*	9208-048-001	Guard, Drive.....	2
*	9454-649-001	Panel, Drive Guard, RH.....	2
*	9989-444-001	Panel, Drive Guard, LH	2
*	9545-008 006	Screw.....	36
25	9973-029-001	Head Recirculation Assembly Duct	2
27	9453-161-002	Motor Pulley - Driver	

Recirculation Duct 25

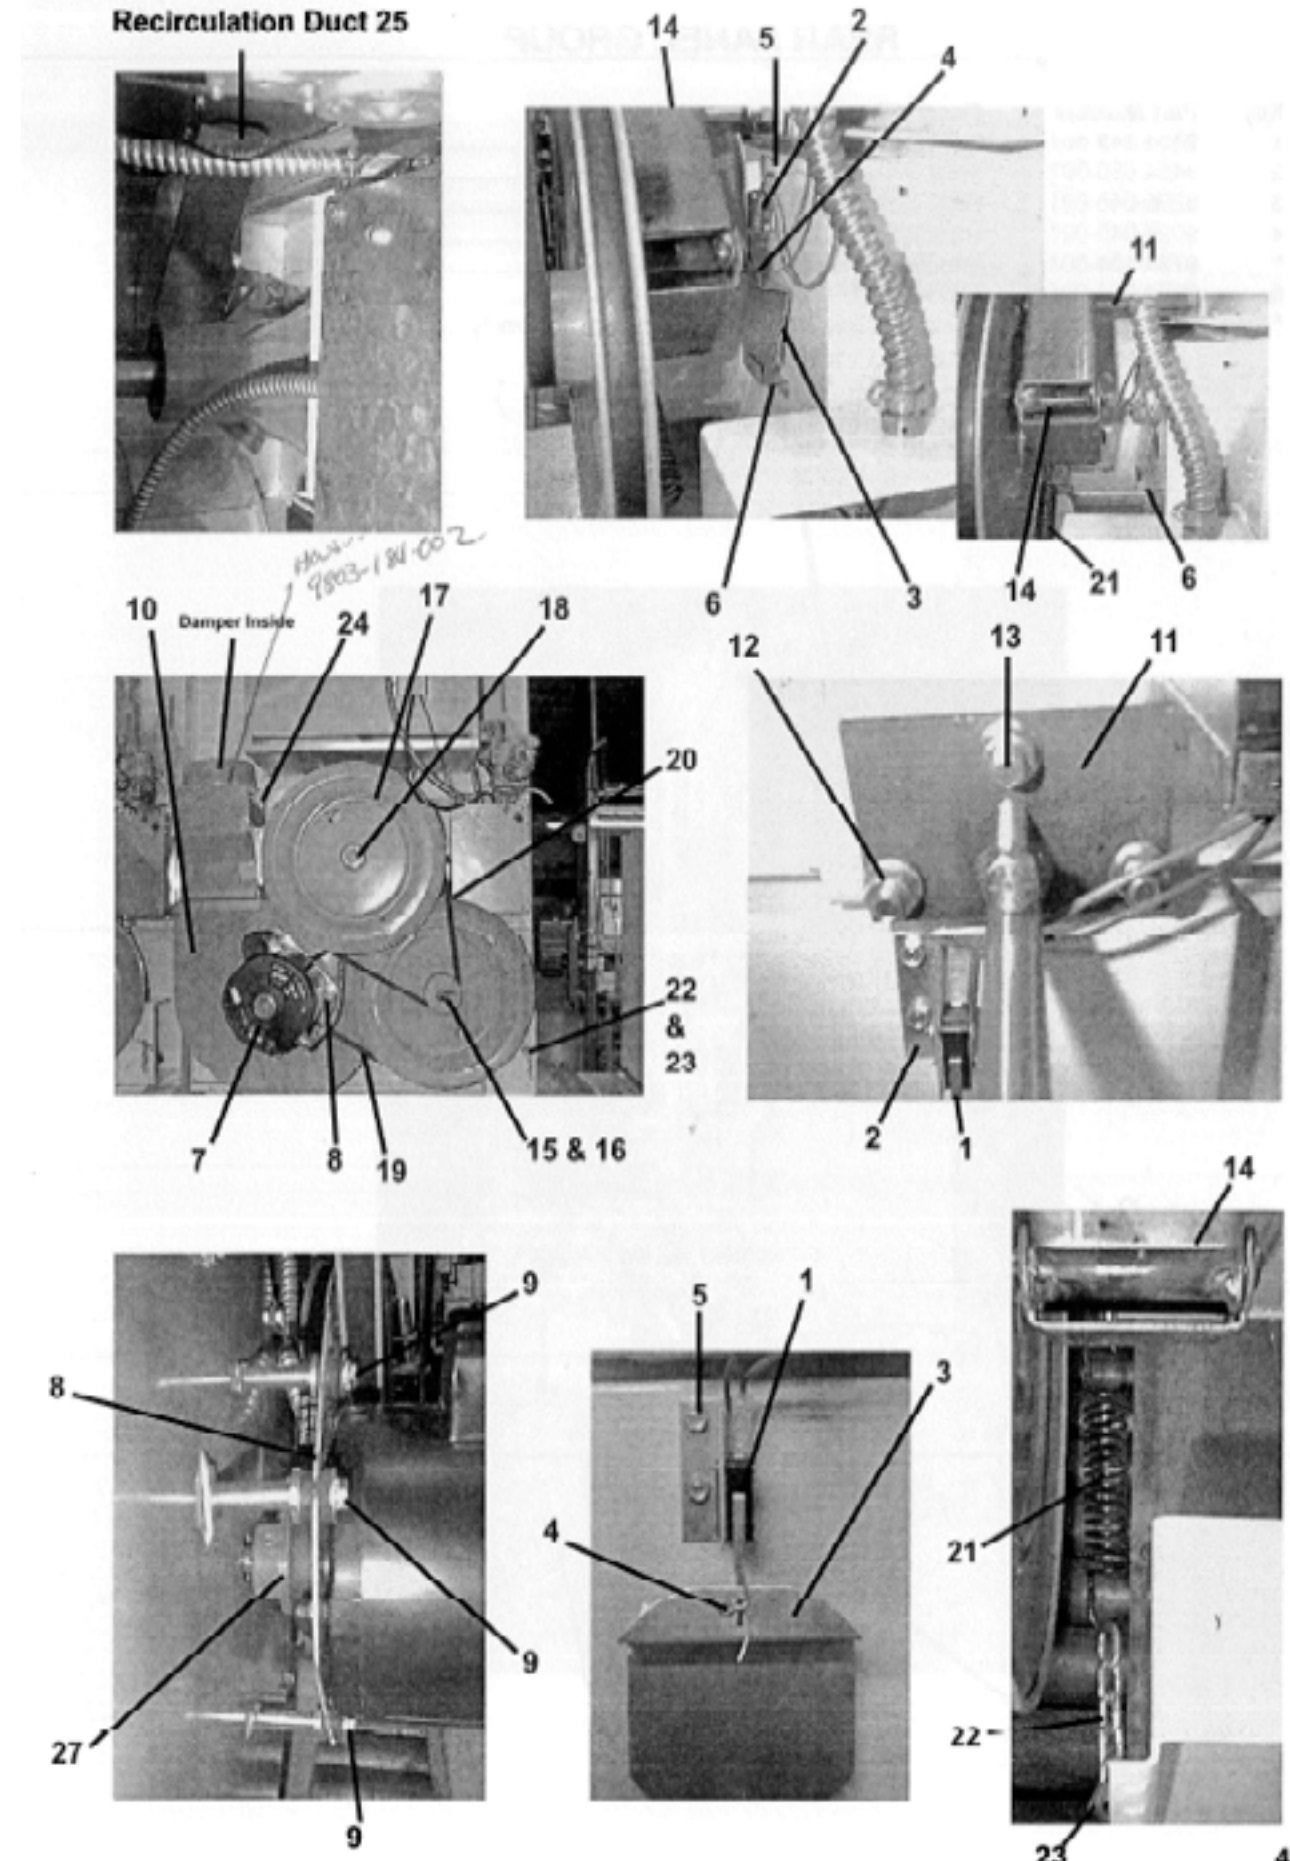

Rear Panel Group

Key	Part Number	Description	Quantity
*	9454-649-001	Back Drive Guard Panel (righthand).....	2
*	9454-650-001	Back Drive Guard Panel (lefthand)	2
*	9208-048-001	Back Guard Drive	2
*	9029-049-001	Back Bracket Guard (lefthand)	2
*	9732-104-001	Vent Kit Offset Complete Transition	2
*	9074-261-001	Cabinet (TOP COVER)	1
*	9989-444-001	2 pcs. of Back Guard Panel (lefthand) Assembly.....	1
		(includes #4 & #2)	
*	9208-062-001	Motor Guard	

Wiring Group

Key	Part Number	Description	Quantity
*	9627-685-002	Wiring Harness, Main.....	1
*	9627-676-002	Wiring Harness, Door Sw & Coins.....	1
*	9631-403-002	Wire, Hi-Voltage, Spark.....	2
*	9627-678-001	Wiring Harness, Low Voltage Ignition	2

Coin Box Group

Key	Part Number	Description	Quantity
*	9732-122-011	Wiring Harness, Main.....	1
1	9807-077-007	Box Assy, Coin	1
2	9349-033-001	Latch, Coin Box.....	1
3	8641-581-008	Washer, Latch Spacer, Thick	2
3	8641-581-010	Washer, Latch Spacer, Thin	4
3	8641-569-002	Washer, Wave	1
3	8641-583-001	Washer, Special Keeper.....	1

